


ADHESIVE IDEAL FOR VERTICAL INSTALLATION OF THE FOLLOWING MATERIALS

FRP • NRP • Plastic & Composite Wall Panels • LVT on Walls
Carpet Tile on Walls • Recycled Rubber • Approved Sheet Vinyl

1




**68°F
(20°C)**

Store adhesive at a minimum temperature of 68°F (20°C) for 24 hours prior to installation.

Condition material per manufacturer's recommendations.

2




Wipe hand across surface.

If dust transfers, substrate is not clean.

Damp-wipe substrate if dust is present.

Prime joint compound with latex-based primer if it is releasing dust after wiping.

3



Any grease on substrate should be removed with a recommended ratio of 1 tsp Dawn dish soap per 32 oz (1 qt) water.

Rinse off solution and let fully dry prior to the adhesive application.


4



HVAC


HVAC must be continuously operated for a minimum of 72 hours at a temperature of no less than 68°F (20°C) prior to installation.

5

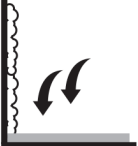


Protect from overspray with a spray shield, drop cloths, paper, or masking.

6



Shake aerosol can well. Remove safety tab.


7

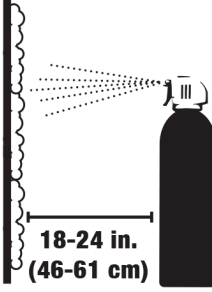

18-24 in.
(46-61 cm)

This adhesive is delivered by a low-pressure propellant. Adhesive should spray out in a wide mist and fall similar to snow towards desired surface. Refer to spray pattern photo on back.

Hold can upright approximately 18-24 inches (46-61 cm) from the wall, aim, and pull trigger.



**HEAVY APPLICATION
APLICACIÓN PESADA**

Move can back and forth spraying smoothly and evenly to achieve the results shown in the photo on the reverse side.

COVERAGE
70 ft²
per can

NOTE: Spray only wall surface. It's not necessary to spray back of wall material with FRP adhesive.

8

Use Step 8 ONLY for interlocking panels or skip to Step 9.




**SPRAY JOINTS &
WHERE SEAMS
MEET ON WALL**

If wall is not flat, the use of a contact adhesive is required on the back of all joints for each interlocking panel and on the wall where panel seams meet up.

Follow contact adhesive's directions.

9

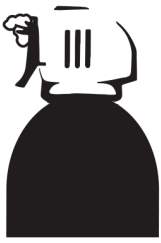

To ensure optimal spray pattern, remove any adhesive build up that may occur during the application process.

12



Open time after application is 8 hours. While open, ensure that adhesive is not contaminated by dust.


10



If overspray occurs, it may be removed with a damp cloth while the adhesive is still wet.

Use mineral spirits for dry overspray

13

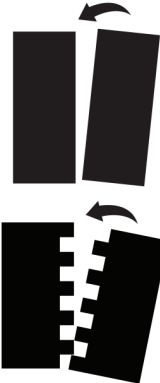

Follow manufacturer's recommendations for installation.

Position material, ensure proper alignment before application of pressure. Reposition as necessary.

11



Allow adhesive to dry until there is no adhesive transfer when lightly touched (10-20 min).


High humidity and/or low temperature increases tack time.

14



Use manufacturer's recommendations for sealing seams and corners.

Roll material with hand roller to complete the bonding process.

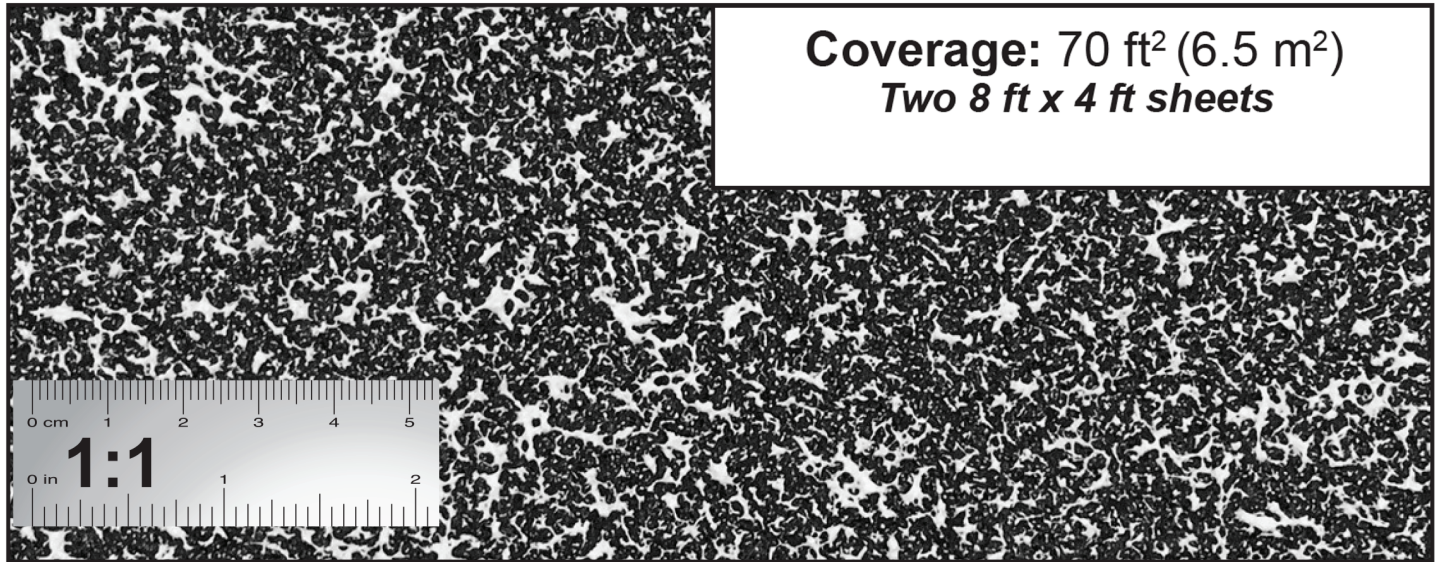

Coverage: 70 ft² (6.5 m²)
Two 8 ft x 4 ft sheets

 **DECORATIVE CEILING TILES**
from plain to beautiful in hours

2036 NW 55th Ave. Margate, FL 33063

Toll Free: 1-866-297-0380

Text: (954) 280-4694

www.decorativeceilingtiles.net